

6-3. Initialization

Items to initialize

The following item must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power window	After reconnecting or changing the battery	P. 64
Engine oil maintenance data	After changing engine oil	P. 295
Tire pressure warning system	<ul style="list-style-type: none"><li>• When rotating the tires differing with front and rear tire inflation pressures.</li><li>• When changing the tire inflation pressure by changing traveling speed.</li><li>• When changing the tire size.</li></ul>	P. 307

